

**ESPACE**

**QUICK GUIDE**





## **WELCOME TO YOUR ESPACE**

### **Note**

Congratulations on your choice: in your Espace, the pleasure of travel reaches new heights as you enjoy its generous space in exceptional comfort.


In order to make your experience of your new vehicle as pleasant as possible, we suggest you use this document to find out about the main functions of your Espace.

This document does not replace the driver's handbook.

Please read the complete driver's handbook for more detailed information on the equipment mentioned in the reference guide for your Espace.




<b>Front and engine compartment</b>	<b>3</b>
<b>Passenger side</b>	<b>4</b>
<b>Rear seats</b>	<b>5</b>
<b>Rear</b>	<b>6</b>
<b>Accessing the vehicle</b>	<b>7</b>
<b>Starting/Stopping the engine</b>	<b>8</b>
<b>Driving position</b>	<b>9</b>
<b>Dashboard</b>	<b>11</b>
<b>Instrument panel</b>	<b>13</b>
<b>Lighting/Wipers</b>	<b>14</b>
<b>Electronic parking brake</b>	<b>15</b>
<b>Cruise control/Speed limiter</b>	<b>15</b>
<b>Heating and air conditioning system</b>	<b>16</b>
<b>Multimedia systems</b>	<b>17</b>
<b>Fuel</b>	<b>20</b>
<b>Gadgets</b>	<b>21</b>

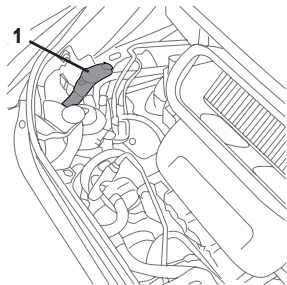

### Screen washer fluid level


Add some fluid in the reservoir **1** if necessary.

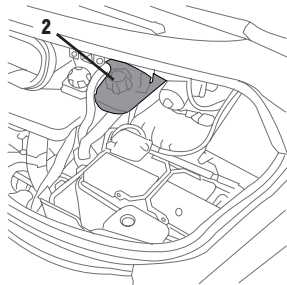

### Coolant level

The level indicated on tank **2** should be between **MINI** and **MAXI**.

If it is necessary to top up this level, it is essential to do so when the engine is cold.

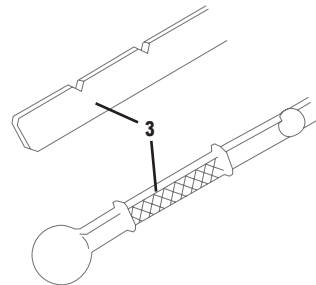


### Engine oil level

To check the oil level, use dipstick **3**. The level indicated on the dipstick should be between **MINI** and **MAXI**.

The oil level may also be checked on the instrument panel.

☒ Refer to Section 4 of your driver's handbook for details of the precautions to be taken when checking the oil level and topping up the oil.




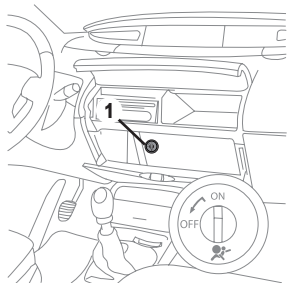

### Deactivating the front passenger air bag

If you wish to fit a rear-facing child seat on the front passenger seat, you must deactivate the air bag: with the vehicle stationary, turn switch **1** to **OFF**.

Immediately reposition the switch to **ON** as soon as you stop using the child seat.

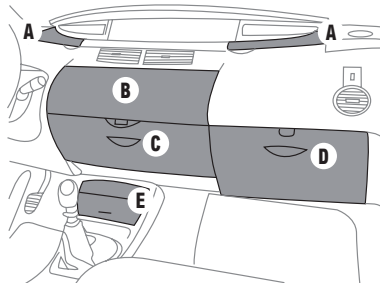

### Storage compartments

Upper storage compartments **A**

Centre storage compartment **B**

Centre storage compartment **C**

Passenger storage compartment **D**


Cup holders **E**

### Sockets for audio connection

Depending on the version, you have the option to connect your portable audio devices, USB key, and MP3 player to your vehicle. Specially designed sockets are located in the central storage compartment **C**.

Refer to the instructions for the equipment for details of the connections.



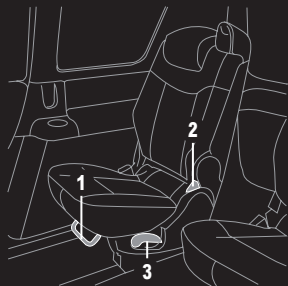

The modularity of your vehicles allows numerous combinations thanks to the sliding seats with automatic locking positions.


### To adjust a seat

**Move a seat backwards or forwards:** lift one of controls **1** or **3** or pull strap **5**.

**Adjust the seatback (or table position):** lift control **2** or pull strap **6**.

### To remove a seat

Lower the headrest and tilt the seatback into the table position.

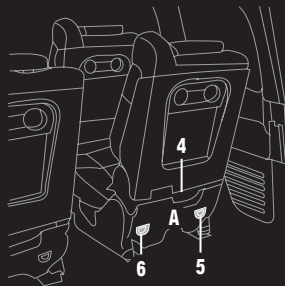


Pull release **5** fully, and move the seat forwards, pulling it off the rails.

To remove the seat from the vehicle, use bar **4** located behind trim **A**

### To refit a seat

Slide the front of the seat in the correct rails, then tilt it backwards. It will lock into the rails under its own weight. Finally, adjust the position of the seat by moving it forward/back.

Check that there are no objects stored behind trim **A**.

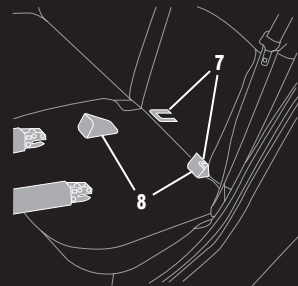


### ISOFIX system

Each rear seat is fitted with the ISOFIX child seat mounting system.

Depending on the type of child seat used, installation requires specific precautions.

The two rings **7** are located between the seatback and the seat base of the seat and are identified by a marking on the seat base. To ensure your child seat can be easily fitted and locked on rings **7**, use access guides **8** on the child seat.

Consult your approved dealer to find out about the equipment available for your vehicle.

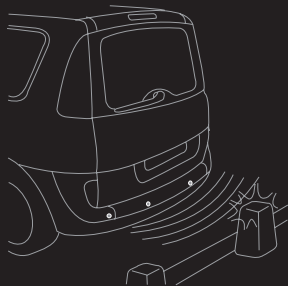


## Parking distance control

On equipped vehicles, the parking distance control measures the distance between the rear (and, depending on the vehicle, the front) of the vehicle and any obstacles that are nearby.

When approaching an obstacle during manoeuvres, the beeps become faster and then sound continuously when 25 cm from the obstacle.


The parking distance control can be deactivated using the switch located on the dashboard.

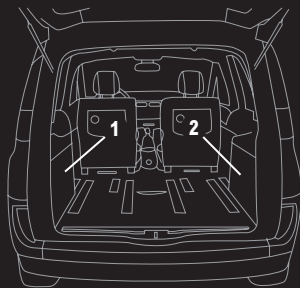

## Tyre pressure kit

Depending on the vehicle, in the event of a puncture, use the tyre inflation kit. The compressor adapter and the bottle are located in rear storage compartment **1** (for vehicles with a standard chassis) or **2** (for vehicles with a long chassis);


Refer to Section 5 of your driver's handbook.

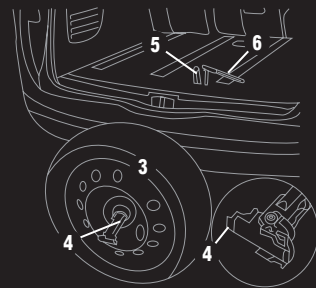

## Emergency spare wheel

Depending on the vehicle, there is an emergency spare wheel **3** provided in the event of a puncture underneath the vehicle.

- In the luggage compartment, lift cover **5**;
- remove the blanking cover;
- use tool **6** to fully unscrew the nut so that the wheel retaining cable unwinds and the wheel drops to the ground;
- stand the wheel up outside the vehicle;
- press on lock **4** and turn it a quarter of a turn;
- run the retaining cable across the wheel rim and release the wheel;
- depending on the vehicle, take out the shim from inside the wheel rim.

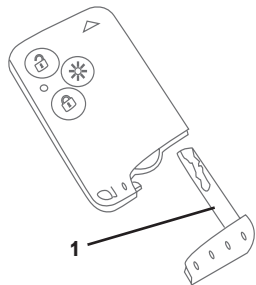

### Locking/unlocking the vehicle

The RENAULT card system replaces the traditional key. Locking/unlocking the vehicle is simple: whether from a distance or nearby, a single press is required.

Never leave the RENAULT card in the vehicle

### RENAULT REMOTE CONTROL CARD VERSION

Press:



to unlock;



to lock;



to switch the exterior lights on/off remotely (in order to find your vehicle in a car park for example).


### RENAULT "HANDS-FREE" CARD VERSION

With the card on your person (you can leave it in your pocket, bag etc.), in addition to the remote control RENAULT card functions, the following are possible:

- automatic unlocking by pulling a door handle;
- automatic locking when leaving the vehicle (a beep sounds).

**Note:** if required, you can use the manual mode or the key **1**. Take out key **1** by pulling it.

### SPECIAL FEATURES

- The detection zone of the card, necessary for locking and unlocking the vehicle, depends on the surrounding environment or the location of the card;
-  when locking the doors (for vehicles fitted with four one-touch electric windows), if you press and hold this button for more than **2 seconds**, the windows (and, depending on the vehicle, the sunroof) close automatically.

### NOTE

In all situations:

- two flashes of the direction indicator lights confirm locking;
- one flash of the direction indicator lights confirms unlocking.

After locking/unlocking the vehicle or the luggage compartment only using the buttons on the RENAULT card, remote locking and unlocking in hands-free mode are deactivated.

To reactivate the hands-free mode: restart the vehicle.

## Starting the engine

With the remote control RENAULT card in reader **2** or the hands-free RENAULT card in the interior detection zone (excluding certain high locations such as the sun visor, etc.) apply the following starting conditions:


### MANUAL GEARBOX

With the gear lever in neutral, press engine start button **1**.

### AUTOMATIC TRANSMISSION

With the lever in position **P**, press engine start button **1**.

**Note:** for vehicles fitted with the hands-free RENAULT card, the brake pedal must be depressed to allow the engine to be started.

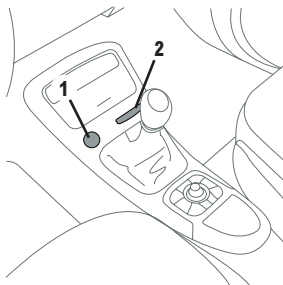


## Stopping the engine

When the vehicle is stationary, press engine start button **1**.

Depending on the case, certain functions (radio, navigation, wipers etc.) may be switched off at the latest when the vehicle is locked.



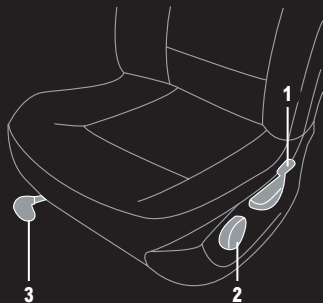

### Manual seat adjustment

#### TO MOVE THE SEAT FORWARDS OR BACKWARDS


Lift lever **3** to unlock the seat. Release the handle at the desired position and make sure that it is locked.

#### TO RAISE OR LOWER THE SEAT

Move lever **1** as many times as necessary upwards or downwards.

#### TO TILT THE SEATBACK

Lift lever **7** and tilt the seatback to the desired position.

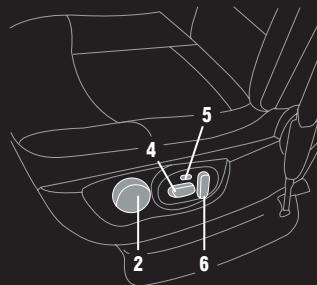

### Electric seat adjustment

#### TO MOVE THE SEAT FORWARDS OR BACKWARDS

Move switch **4** forwards or backwards.

#### TO RAISE OR LOWER THE SEAT


Move switch **4** upwards or downwards.

#### TO TILT THE SEATBACK

Move switch **6** forwards or backwards.

#### POSITION MEMORY

With the ignition on, press button **5** until a beep sounds.

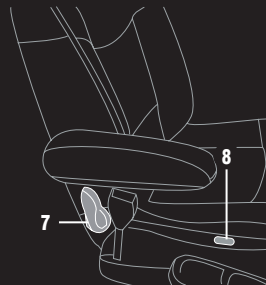

### Heated seats

(depending on vehicle)


With the engine running, press switch **8**.

The indicator light in the switch lights up. The system, which has a thermostat, decides whether the heating is needed.

### Adjusting the lumbar support on the seat

Move handle **2**.

Carry out these adjustments when the vehicle is stationary.

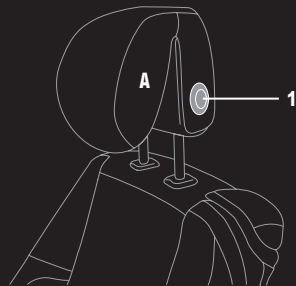

### Headrest

#### RAISING THE HEADREST


Pull the headrest upwards to the desired height.

#### LOWERING THE HEADREST

Press button **1** and guide the headrest down to the desired height.

#### TO ADJUST THE ANGLE OF THE HEADREST

Depending on the vehicle, move section **A** towards or away from you to the required position.

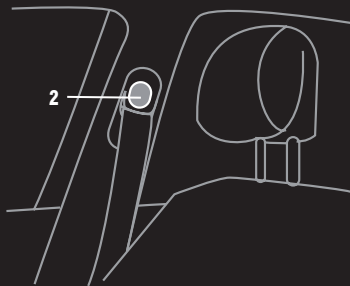


### Seat belt

#### ADJUSTING THE HEIGHT

Push down the control **2** to lower the seat belt.

Lift the control **2** to raise the seat belt.

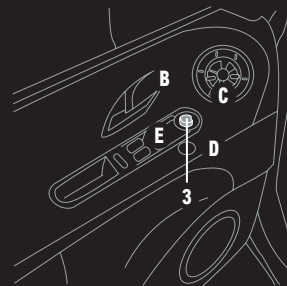

### Door mirrors


#### ADJUSTMENT

With the ignition on, turn button **3**:  
 – position **B** to adjust the left-hand door mirror;  
 – position **D** to adjust the right-hand door mirror.

#### FOLDING DOOR MIRRORS

Turn button **3** to position **E** and the door mirrors fold in.

To reset them for driving, return to position **B, C** (inactive position) or **D**.

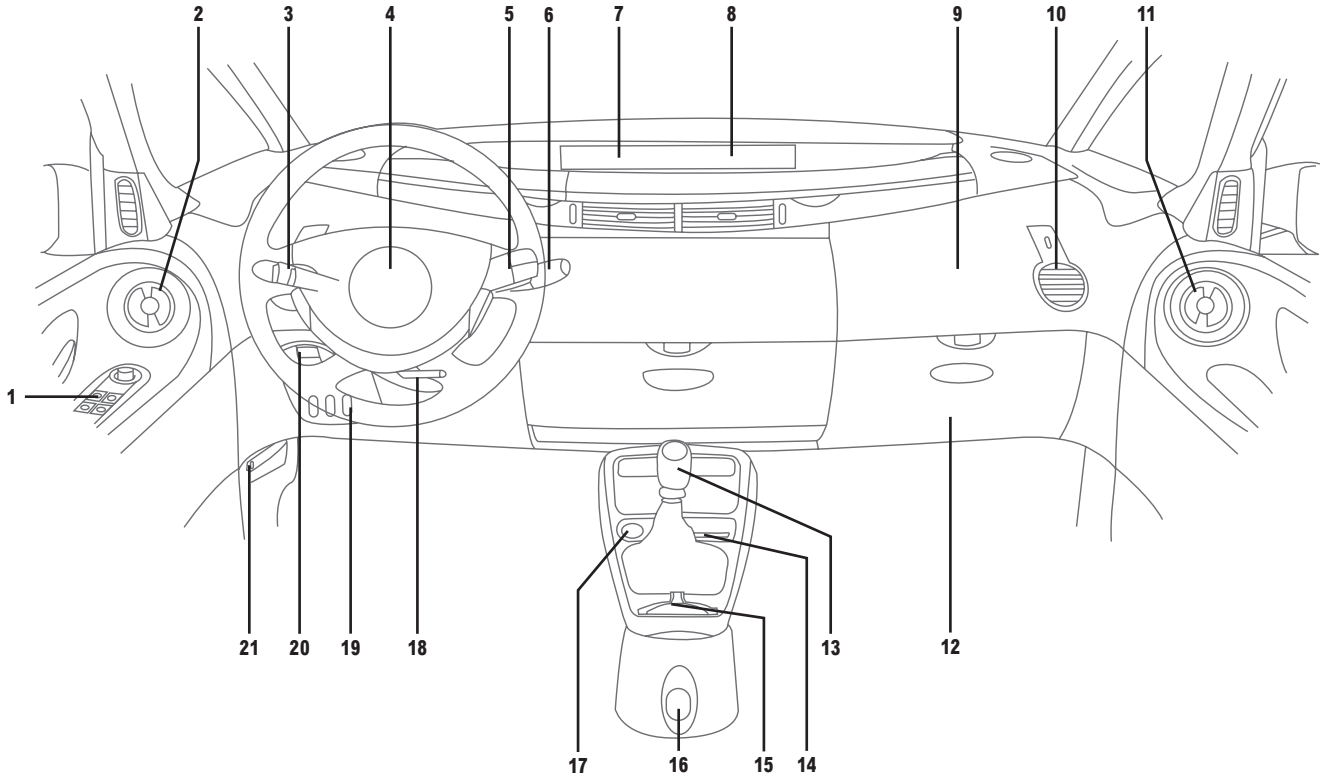

**1** Electric controls for:

- windows;
- door mirrors.

**2** Heating and ventilation controls.**3** Stalk for:

- direction indicator lights;
- exterior lights;
- front fog lights;
- rear fog lights.

**4** Horn.

Location for driver's air bag.

**5** Radio remote control.**6** Stalk for:

- windscreen and rear screen wash/wipe;
- trip computer and warning system information read-out.

**7** Instrument panel.**8** Information display:

- clock,
- exterior temperature,
- radio information,
- navigation aid information.

**9** Location for passenger air bag.**10** Air vent.**11** Heating and ventilation controls.**12** Passenger glove box.**13** Gear lever.**14** RENAULT card reader.**15** Multimedia equipment controls.**16** Cigar lighter.**17** Engine Start/Stop button.**18** Control for adjusting steering wheel height and reach.**19** Controls for:

- electric beam height adjustment;
- lighting rheostat for control instruments;
- electronic stability program (E.S.P.);
- parking distance control;
- cruise control and speed limiter.

**20** Electronic parking brake.**21** Bonnet release.

The equipment fitted, described below, depends on the version and country.

## Warning lights

**SERVICE**

If the light comes on, you should visit an approved Dealer immediately. You risk damaging your vehicle if you keep driving after this warning light has come on.

**STOP**

: this warning light requires you to stop immediately, for your own safety, as soon as traffic conditions allow. Stop your engine and do not restart it. Contact an approved Dealer.



: handbrake "on" and brake circuit incident warning light.



: coolant temperature warning light.



Driver or front passenger seat belt reminder warning light.




Air bag warning light.

This comes on when the ignition is switched on and goes out after a few seconds.

If it does not come on when the ignition is switched on or if it flashes, there is a fault in the system.

Contact an approved Dealer as soon as possible.

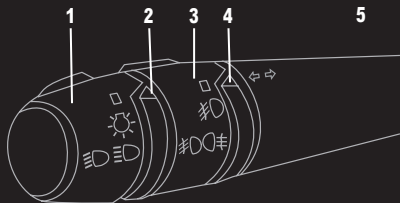

## Lighting

Turn ring **1** until the symbol is opposite mark **2**.



: switches on the side lights



: switches on the dipped beam headlights

**Main beam headlights:** with ring **1** in position




, pull stalk **5** towards you.

**Headlight flash:** with ring **1** in park position or position



, pull stalk **5** towards you.

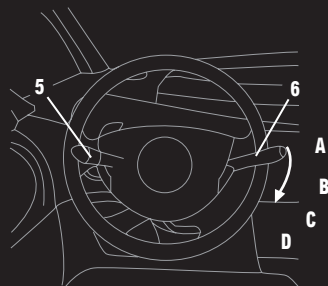

Turn ring **3** until the symbol is opposite mark **4**.



: switches on the front fog lights



: switches on the rear fog light

To switch off, repeat the operation.

**Lights-on warning buzzer:** when the front doors are opened, a buzzer sounds to warn you that the lights are on when the ignition is switched off (to prevent the battery from discharging).

## Wiping

With the ignition on, position stalk **6** for:

**A:** Park position


**B:** Intermittent wiping or automatic wiping, depending on vehicle

You can vary the time between sweeps by turning the centre ring on stalk **6**.

**C:** normal wiping speed

**D:** fast wiping speed

Windscreen washer: pull stalk **6** towards you.

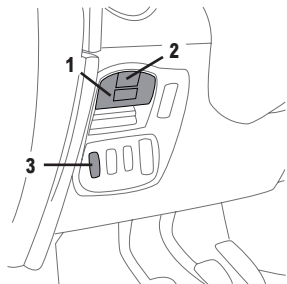

### Electronic parking brake

Press the engine start/stop button to automatically activate the parking brake when the engine is switched off (except if the engine has stalled).

It is released automatically: with the engine running, a gear engaged, when accelerating and, for manual gearboxes, as soon as the clutch is released.

The assisted parking brake, like the manual parking brake, also enables:

- manual engagement: pull handle **1**;
- manual release: with the engine running, pull handle **1** while pressing unlocking button **2** and release.

### Cruise control/speed limiter

The cruise control is a function which helps you to keep your driving speed at a constant value.

The speed limiter function helps you stay within the driving speed limit.

If fitted to the vehicle, select the cruise control or speed limiter by moving switch **3**:



cruise control


**Note:** you may always interrupt the operation of the cruise control by depressing either the brake or clutch pedal.

You can always exceed the cruising speed by depressing the accelerator pedal.



speed limiter


**Note:** you can always exceed the limit speed by depressing the accelerator pedal fully.

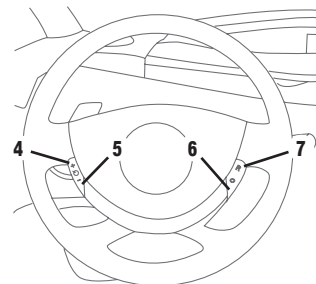

### Cruise control/speed limiter controls

- 3** Main "On/Off" switch.
- 4** Programmed speed activation, storage and increase switch (+).
- 5** Programmed speed activation, storage and decrease switch (-).
- 6** Switch the function to standby (with programmed speed storage) (O).
- 7** Activation with recall of stored programmed speed (R).


Refer to Section 2 of your driver's handbook.

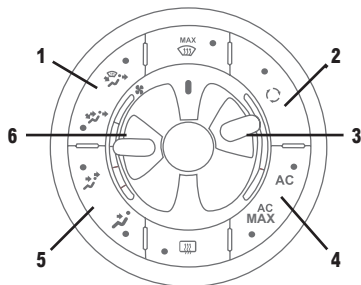

### Manual heating and air conditioning, driver's side

If you want to:

- Adjust the distribution of air: press keys **1** or **5** repeatedly to move from one distribution to the next.
- Select the temperature: turn control **3**.
- Adjust the ventilation speed: turn control **6**.
- Activate/deactivate air recirculation: press key **2**.
- Activate/deactivate the air conditioning: press switch **4**.

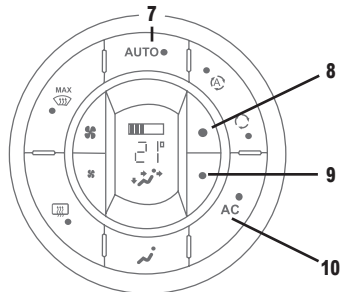

### Automatic heating and air conditioning, driver's side

To benefit from the automatic climate control:


- select the required temperature using buttons **8** and **9**;
- press button **7** for the automatic mode to control the system.


**Note:** pressing button **7** for more than 3 seconds sets the passenger temperature to the driver's temperature.

### AIR CONDITIONING

Button **10**:

- authorises operation of the air conditioning (the system decides whether air conditioning is required);
- prohibits operation of the air conditioning (the system cannot trigger the air conditioning).

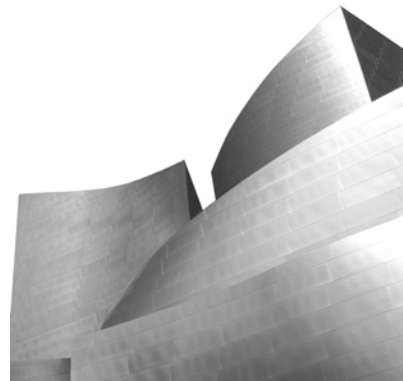

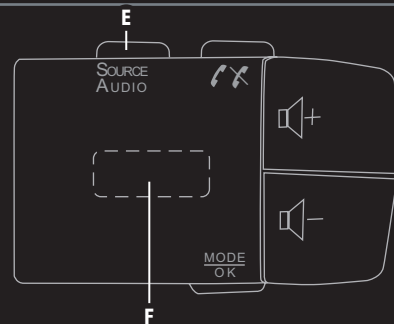

## Listening to the radio or a **CD**

Select the source (FM radio or a CD) by pressing button **C** or **E**.

### FM RADIO SOURCE


To select a radio station in an alphabetical list: press **D** to select "LIST" mode and press one of the buttons **A** or **B** or turn control knob **F** to scroll through the list of radio stations (press and hold button **D** to update the list of radio stations).

To store a radio station to one of the buttons numbered 1 to 6:

- select the radio station;
- press on one of the buttons from 1 to 6, until a beep sounds;
- to recall a stored radio station, press the corresponding button.

### CD SOURCE (DEPENDING ON THE VEHICLE)

Insert a CD in the player: the CD will play automatically.

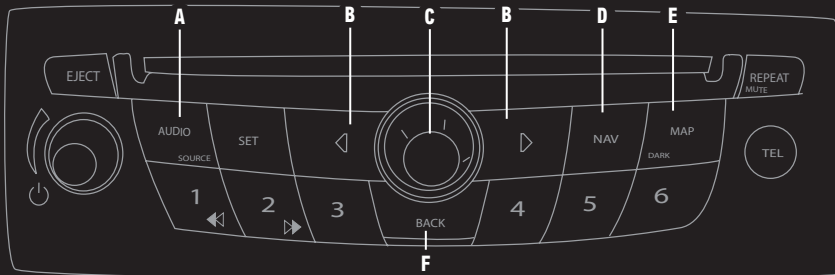

## LISTENING TO THE RADIO OR A CD

Choose the source (FM radio or CD) by pressing one of the buttons **A**.

## FM RADIO SOURCE

To select a radio station from an alphabetical list, press **A** then **B** to go to the station name field or "A-Z", then turn **C** or **H**.


To store a radio station to one of the buttons numbered 1 to 6:

- select the radio station;
- press on one of the buttons from 1 to 6, until a beep sounds.

To recall a stored radio station, press the corresponding button.

## STARTING THE NAVIGATION SYSTEM

- Press **D**;
- turn button **C** to select "Enter an address" then confirm by pressing **C**;
- enter the address fields (town and street) using the keypad and **C** on the screen. To select and confirm a character, rotate then press button **C**;
- when entry is complete, select "Guide" and follow the voice guidance and on-screen directions to your destination.

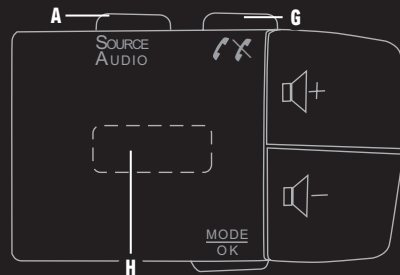

## CANCELLING AN ACTION


Press **F** if you wish to return to the previous menu or erase an entered character.

## DISPLAYING THE MAP

Press button **E** to return to the map at any time.

## ACCESSING THE LIST OF NUMBERS

Buttons **G**: to access the list of telephone numbers directly from the steering wheel controls.

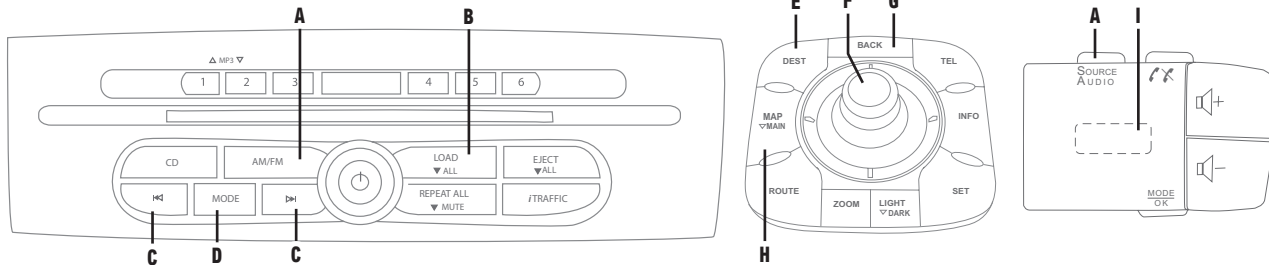

### LISTENING TO THE RADIO OR A CD

Choose the source (FM radio or CD) by pressing one of the buttons **A**.

### FM RADIO SOURCE

To select a radio station from an alphabetical list, press **D**, choose the "List" mode, then select the name of the radio either using the arrows **C** or by turning control knob **I**.

To store a radio station to one of the buttons numbered 1 to 6:

- select the radio station;
- press on one of the buttons from 1 to 6, until a beep sounds.

To recall a stored radio station, press the corresponding button.

### CD SOURCE

Before inserting a CD, press button **B**. You can insert up to 6 CDs.

### VOICE RECOGNITION

To activate voice recognition to control certain functions by voice, press on the end of the lighting stalk.

### STARTING THE NAVIGATION SYSTEM

- press **E**;
- turn button **F** to select "new address" then confirm by pressing **F**;


- enter the address fields (town and street) using the keypad on the screen. To select and confirm a character, rotate then press button **F**;
- when entry is complete, select "Start" and follow the voice guidance and on-screen directions to your destination.

### CANCELLING AN ACTION

Press **G** if you wish to return to the previous menu or erase an entered character.

### DISPLAYING THE MAP

Press button **H** to return to the map at any time.

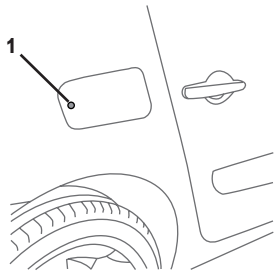

### Fuel tank

Your vehicle is fitted with an integrated fuel filler flap.


Press the left-hand side of flap **1** to open it, then insert the nozzle.

The fuel tank capacity is **approximately 80 litres**.

If the low fuel level warning light comes on when driving, fill the tank as soon as possible.


You will be able to drive a further 30 miles (50 km) (approximately) before the tank must be refilled.



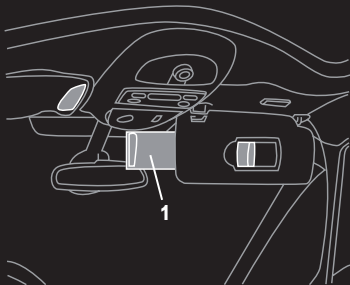

### Sun visor

To fill in the space between the two front sun visors, pull out flap **1** in each of the sun visors.

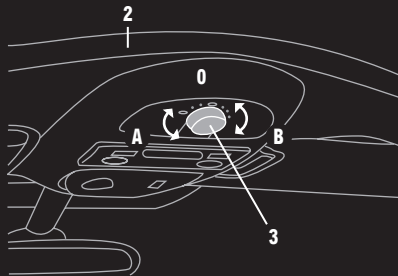


### Electric sunroof

To open the electric sunroof:

- slide the screen **2** by moving button **3** to position **A**;
- slide the sunroof by moving button **3** to position **B**.

To close the electric sunroof, move button **3** to position **0**.

To close the screen, move button **3** to position **0**.

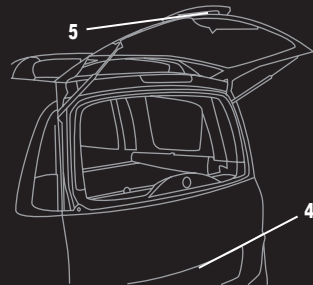

### Opening rear screen

Depending on the vehicle, there may be an opening rear screen for access to the luggage department. To open it, press switch **4**, then lift it using the base of the rear screen wiper **5**.

To close the screen, hold the base of the wiper **5** and fold back the opening rear screen until it locks in position.

