

MODUS

QUICK GUIDE





WELCOME TO YOUR NEW GRAND MODUS/MODUS

Introduction

Congratulations on your choice - your Grand Modus/Modus has been created by RENAULT's design teams to offer you maximum space and comfort.


In order to make your experience of this nimble and practical vehicle as pleasant as possible, we suggest you discover the main functionalities of your Grand Modus/Modus in this document.

This document does not replace the driver's handbook.

Please read the complete driver's handbook for more detailed information on the equipment mentioned in the reference guide for your Grand Modus/Modus.




Front and engine compartment	3
Passenger side	4
Rear seats	5
Rear	6
Accessing the vehicle	7
Starting/Stopping the engine	8
Dashboard	9
Audio system	11
Headrest	13
Seat belt	13
Door mirrors	13
Adjusting the seats	14
Lighting/Wiping	15
Heating and air conditioning system	16
Cruise control/Speed limiter	17
Fuel	18
Gadgets	19

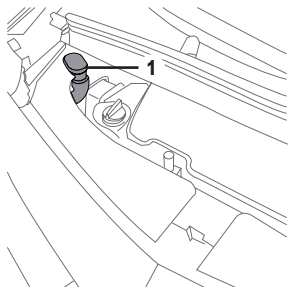

Screen washer fluid level


Add some fluid in the reservoir **1** if necessary.

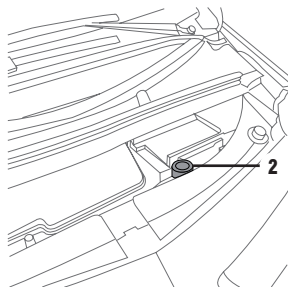

Coolant level

The level indicated on the reservoir **2** should be between MIN and MAX.

If it is necessary to top up this level, it is essential to do so when the engine is cold.

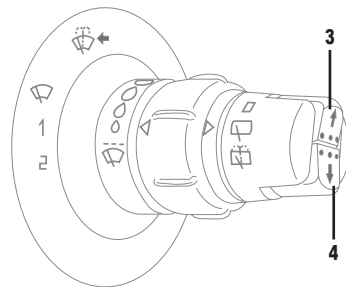


Engine oil level

You can check the oil level on the instrument panel. When the engine is started and for approximately 30 seconds, press either button **3** or **4**. The oil level is displayed on the instrument panel.

Refer to Section 4 of your driver's handbook for the precautions to take when topping up the oil.



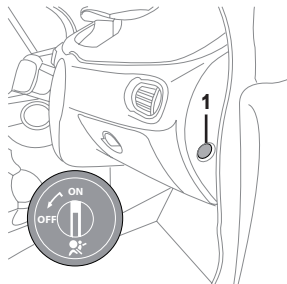






Deactivating the front passenger air bag

If you wish to fit a child seat in the front passenger seat, it is essential to deactivate the airbag:

– with the vehicle stopped, rotate switch **1** to **OFF**.

Reposition the switch immediately to **ON** as soon as you are no longer using the child seat.

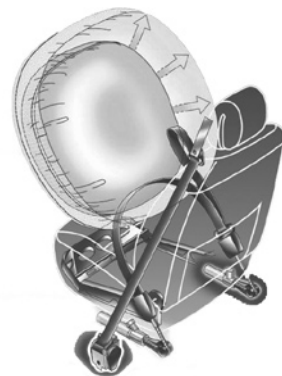

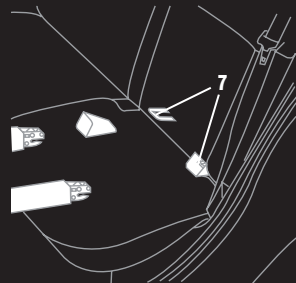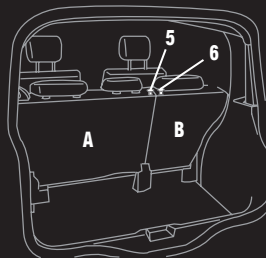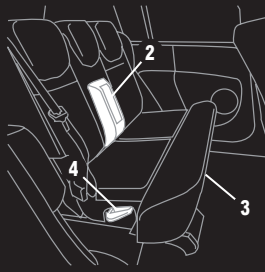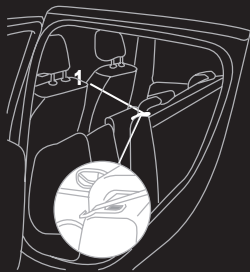

Folding the rear bench seat

FIXED REAR BENCH SEAT

- Lift the front of the seat base then tilt it;
- press button **1** on each side of the seatback and tilt it.

TRIPLET REAR BENCH SEAT

- Bring the bench seat as far forward as possible using handle **3**;
- switch to the 3-seat bench seat configuration by keeping handle **4** raised and pulling the seat base towards you, then fold central section **2**;
- pull the levers located between the headrests and tilt the seatbacks;
- take hold of the central lever located on the back of the bench seat and tilt the assembly towards the front of the vehicle.

SLIDING REAR BENCH SEAT

- Lower the rear headrests and move the bench seat as far forward as possible;
- pull lever **5** and lower large seatback **A** or pull lever **6** and lower small seatback **B**;
- lift the levers located at the front and on each side of the bench seat and lift the seat base.


ISOFIX system

Each rear side seat is fitted with the ISOFIX child seat mounting system **7**.

Depending on the type of child seat used, installation requires specific precautions.

Refer to chapter 1 “Child safety” in your Driver’s Handbook for special notes.

Consult your RENAULT Dealer to find out about the equipment available for your vehicle.

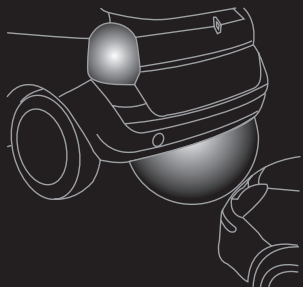


Parking distance control

For equipped vehicles, the parking distance control measures the distance between the rear of the vehicle and any obstacles nearby.


When approaching an obstacle during manoeuvres, the beeps become faster and then sound continuously when 25 cm from the obstacle.

The system may be temporarily or permanently deactivated using the switch located on the dashboard (refer to your Driver's Handbook).

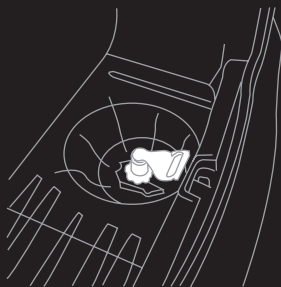A

Emergency spare wheel winch/tyre inflation kit (depending on vehicle)

For precautions when using the emergency spare wheel winch **A** or tyre inflation kit **B**, refer to chapter 5 in the Driver's Handbook.

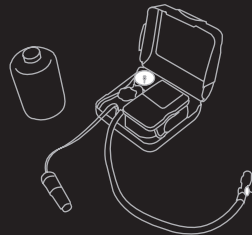B

Locking/unlocking the vehicle

REMOTE CONTROL RENAULT KEY A OR B

Press:



to unlock;




to lock;



to lock/unlock the luggage compartment only.

In all situations:


- Two flashes of the direction indicator lights confirms vehicle locking;
- One flash of the direction indicator lights confirms vehicle unlocking.

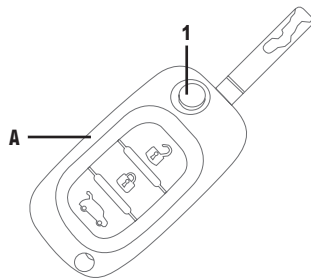

SPECIAL FEATURES OF THE KEY A


To release the insert from its housing, press button **1**, it will come out automatically.


To return the insert, push it into its housing.

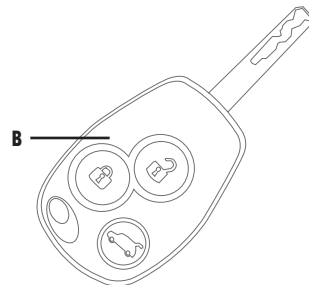

SPECIAL FEATURES

- Never leave a key in the vehicle;

-  depending on the vehicle, pressing this button twice in succession prevents the vehicle from being opened, even from the inside.

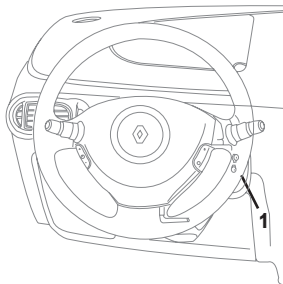

Stopping the engine

With the vehicle stopped, turn the key towards you.

Accessing functions

Turn the key through two positions in order to access certain functions (radio, navigation, wipers etc.).

Starting the engine

With the key in the ignition switch **1**, turn it fully on. Once the engine has started, release it.


Note: in diesel versions, there may be a delay of several seconds between turning the key and engine start to allow for engine preheating.

VEHICLE FITTED WITH AUTOMATIC TRANSMISSION

Before starting, position the lever to **N** or **P**.

Depending on the case, these functions will switch off at the latest when the vehicle is locked.



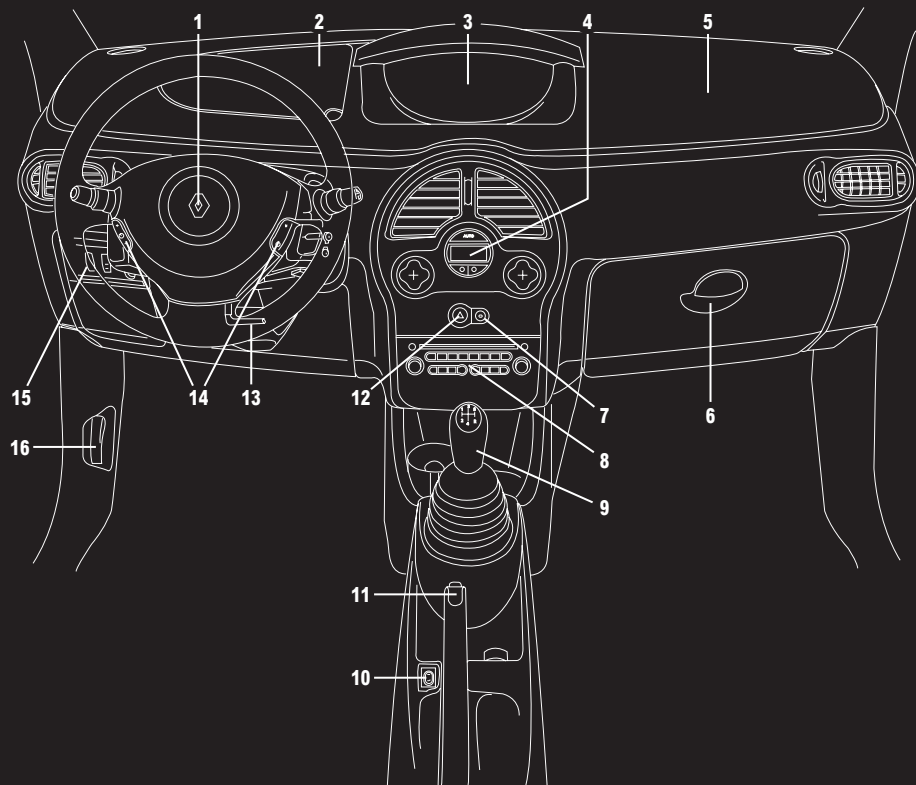



1 Horn and location for driver's air bag.

2 Dashboard storage compartment.

3 Instrument panel

– Warning lights:

 this warning light requires you to stop immediately, for your own safety, as soon as traffic conditions allow. Stop your engine and do not restart it. Contact an approved Dealer.

 this means you should drive very carefully to an approved Dealer as soon as possible. You risk damaging your vehicle if you keep driving after this warning light has come on.

– Distance before service:

When the message “service due in ...” along with the remaining distance appears on the instrument panel, this notifies you when the next service is due.

If the service has not been carried out in time, the message “service vehicle” requires that the vehicle be serviced as soon as possible.

– Aiding fuel economy:

For vehicles fitted with a manual gearbox, this function indicates the best time to change gear to optimise fuel consumption.



shift up a gear;



shift down a gear.

– Seat belt reminders:



driver's or front passenger's seat belt not buckled.

4 Heating and ventilation controls.

5 Location for passenger air bag.

6 Glove box.

7 Central door locking switch.

8 Location for radio.

9 Gear lever.

10 Cruise control/speed limiter on/off main switch.

11 Handbrake lever.



12 Hazard warning lights.

13 Steering column height adjustment controls.

14 Cruise control/speed limiter controls.

15 Controls for:
– parking distance control;
– traction control;
– electric headlight beam adjustment.

16 Bonnet release control.

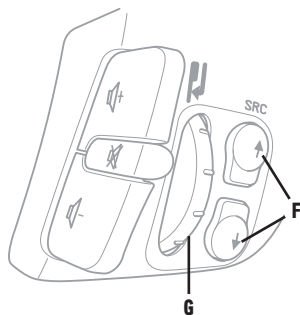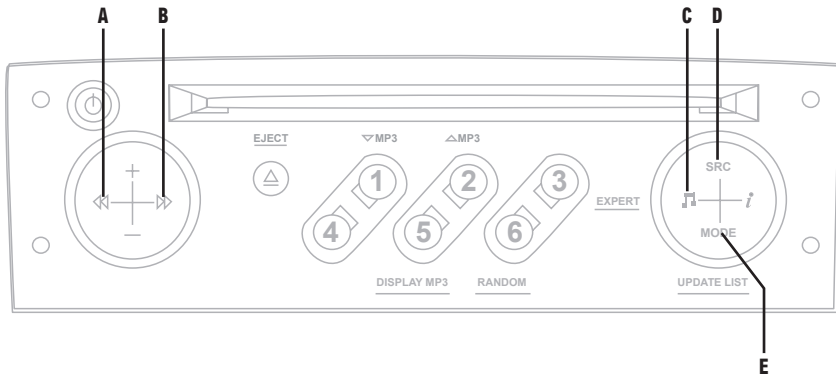

Auxiliary inputs

Depending on the vehicle, you can access inputs in the glovebox which enable you to connect your audio appliances.

For special notes on your system, refer to the Driver's Handbook for the equipment.

LISTENING TO THE RADIO OR A CD

Select the source (FM radio or CD) by pressing button **D** or **F**.

FM radio SOURCE

To select a radio station in an alphabetical list: press **E** to select "LIST" mode and press one of the buttons **A** or **B** or turn wheel **G** to scroll through the list of radio stations (press and hold button **E** to update the list of radio stations).


To store a radio station to one of the buttons numbered 1 to 6:

- select the radio station;
- press on one of the buttons from 1 to 6, until a beep sounds;
- to recall a stored radio station, press the corresponding button.

CD SOURCE

Insert a CD in the player, or for vehicles fitted with a 6 CD changer, press button **D** before inserting the CD. The system will start reading the CD automatically.



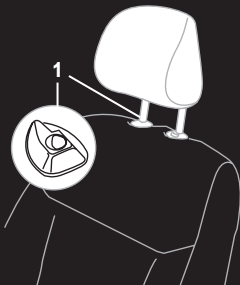


Headrest

RAISING THE HEADREST

Raise the headrest to the required height.

LOWERING THE HEADREST


Raise the headrest slightly, push the tab **1** then lower the headrest until it is at the required height.

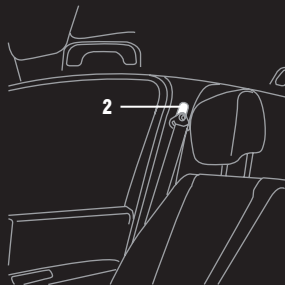

Seat belt

ADJUSTING THE HEIGHT

Tilt the button **2** to select the desired height of the shoulder strap.

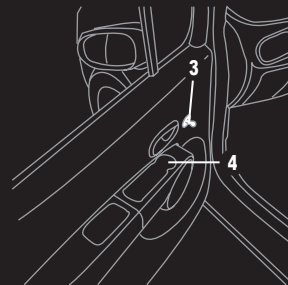


Door mirrors

MANUAL ADJUSTMENT

Turn the lever **3** to adjust the door mirror.

ELECTRICAL ADJUSTMENT

Select the door mirror to be adjusted using the button situated in position **4** then, with the ignition on, move the button until the mirror reaches the correct position.

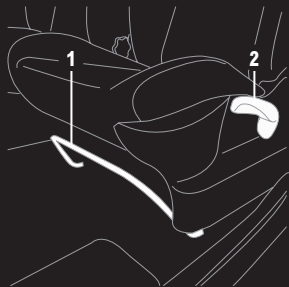

Adjusting the seats


TO MOVE THE SEAT FORWARDS OR BACKWARDS

Lift the handle **1**, slide the seat into the desired position and release the handle. Check that it is correctly locked.

TO RAISE OR LOWER THE SEAT


On equipped vehicles, move handle **2** as many times as is required:

- to raise the seat, move it upwards;
- to lower the seat, move it downwards.

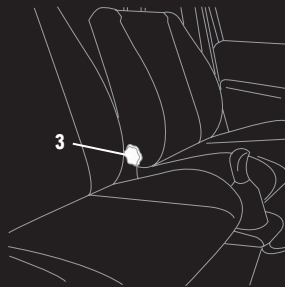

TO TILT THE SEATBACK

Turn control knob **3**.

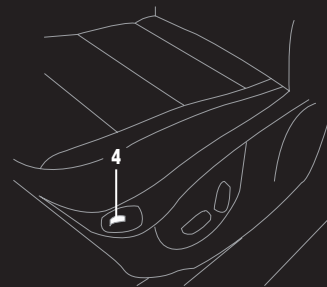


Heated seats

To switch it on: press switch **4**, the integrated indicator light comes on.

To switch it off: press switch **4** again, the integrated indicator light goes off.

The system, which has a thermostat, decides whether or not the heating is needed.

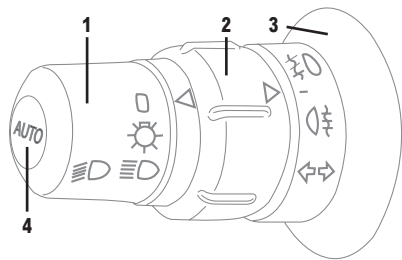

Lighting

Turn the ring 1 to:




: switch on the side lights;




: switch on the dipped headlights;



: ring 1 in position , pull the switch 3.

To activate the lighting automatic operation, depending on the vehicle, with the ignition on, press button 4 for four seconds.

Hazard lights: pull the switch towards you.

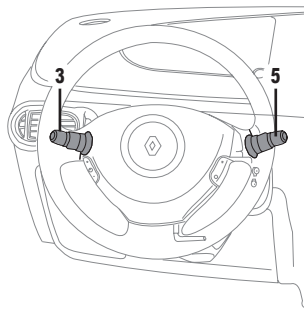

Turn ring 2 then release it to:




: switch on the front fog lights;



: switch on the rear fog light.

To switch them off, repeat the operation.

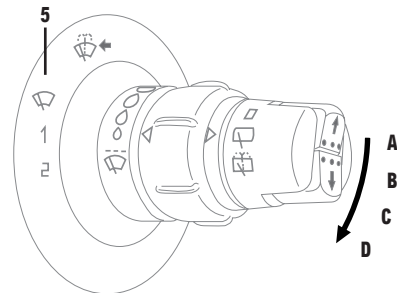

Wiping

Position switch 5 to obtain:

A: Stop;


B: Intermittent wiping or automatic wiping, depending on vehicle;

C: Continuous slow wipe;

D: Continuous fast wipe;

Windscreen washer: pull handle 3.


Note: To adjust the wiping speed and the sensitivity of automatic wiping, rotate ring 4.

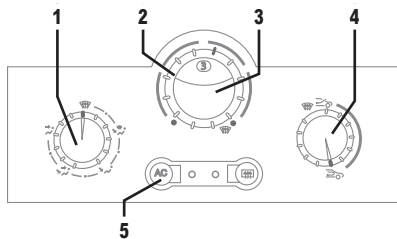

Manual air conditioning

If you want to:

- distribute the air: turn control **1**;
- choose the temperature: turn ring **2**;
- adjust the ventilation speed: turn control **3**;
- recycle the air: turn control **4**;
- switch on the air conditioning: press switch **5**.

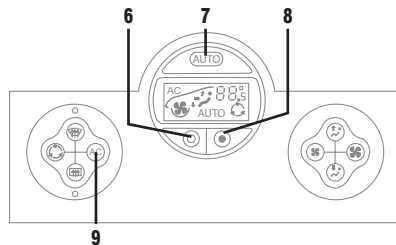


Automatic climate control


To benefit from the automatic heating and air conditioning system, choose the desired temperature using buttons **6** and **8** then press button **7** for the automatic mode to control the system.

Note: pressing one of the other buttons will exit automatic mode according to your requirements.

AIR CONDITIONING

Button **9** enables the air conditioning to be activated (AC indicator light on the display on). Press button **7** to return to automatic mode (integrated indicator on).

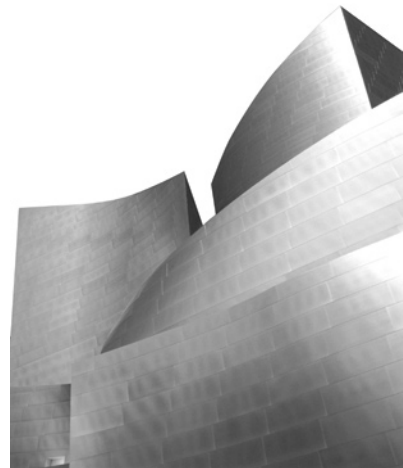

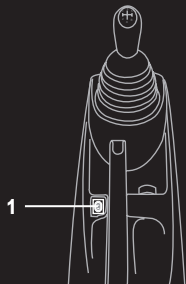

Cruise control/speed limiter

If fitted to the vehicle, activate the cruise control or speed limiter by moving switch **1**:




: cruise control;

: speed limiter.

Note: you may always interrupt the operation of the cruise control by depressing either the brake or clutch pedal.

You can always exceed the limiter speed by depressing the accelerator pedal fully.

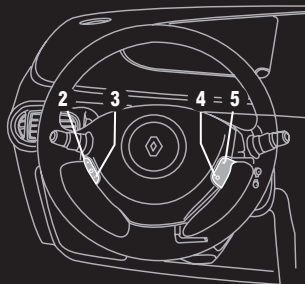

Cruise control/speed limiter controls

Increase the speed: button **2** (+);


Reduce the speed: button **3** (-);

Standby: button **4** (O);

Recall stored speed: button **5** (R);

Deactivate the function: button **1**.

Refer to Section 2 of your driver's handbook.

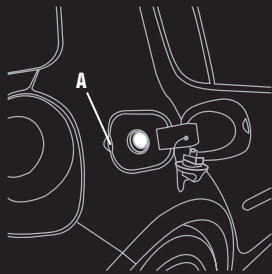


Fuel tank

Pull in recess **A** of the cover to open it.

When driving, when the low fuel level warning light comes on, fill up with fuel as soon as possible: when the warning light comes on, you have approximately 30 miles (50 km) left, driving at moderate speed.

The fuel tank capacity is **approximately 49 litres.**



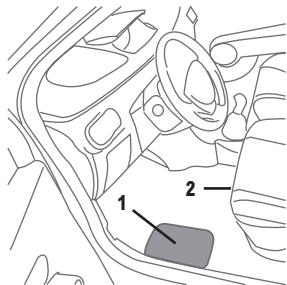


Floor flaps

The flaps **1** are located in the floor, in the front passenger's footwell.


Trays under the front seats

In equipped vehicles, the trays **2** are located under the front seats and provide an ideal storage space for your Renault folder and documents etc.

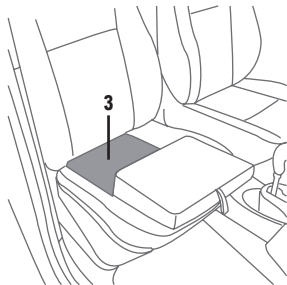


Front passenger seat built-in storage

On equipped vehicles, pull tab **3** to tilt the seat base.

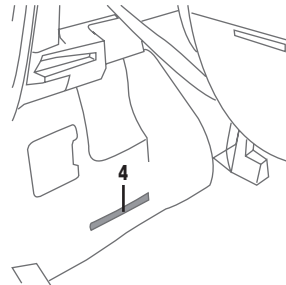


Retaining belt

Located on the left-hand side of the luggage compartment, the strap **4** will hold an oil container etc.

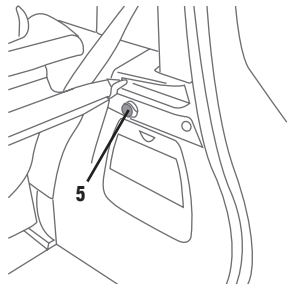

Bag hooks

On the right-hand side of the luggage compartment, there is a hook **5** for securing bags.

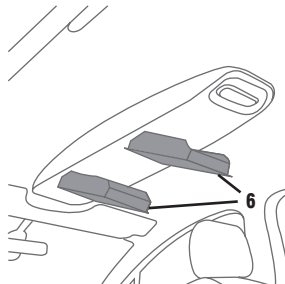

Roof compartments

Maximum weight in each compartment **6**: 500 g evenly distributed.

(www.renault.ie) (www.renault.co.uk) (www.renault.is)



8 2 0 0 8 5 3 5 7 0

05